


19Pcs RGBW Led Zoom Par Light

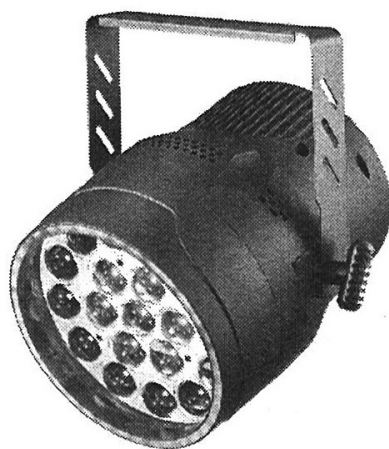

User Manual

1、SetUp

A001		A001-A512	DMX Address
15CH	Channel	Default 15Channels	Channel Choose 08CH,15CH,23CH
-512	Work Model		DMX512,Auto,Sound
E001	Effect Model	E001-E254	Effect Choose (254Kind)
P000	Effect Speed	P000-P255	UP/DOWN Button Choose Work Speed (P000-P255) , ENTER Save.
R255	Manual W1	R000-R255	Manual Red Adjust , Can Adjust the date R000-255 to change the brightnees
G255	Manual W2	G000-G255	Manual Green Adjust , Can Adjust the date G000-255 to change the brightnees
B255	Manual W3	B000-B255	Manual Blue Adjust , Can Adjust the date B000-255 to change the brightnees
W255	Manaul W4	W000-W255	Manual White Adjust , Can Adjust the date W000-255 to change the brightnees
H255	Manual Zoom	U000-U255	Manual Zoom Adjust , Can Adjust the date U000-255 to change the Zoom Angle
F000	Manual FLash	F000-F255	Press UP or Down Button to Change the Flash Speed
T000	Tem Display	T000-T105	Display TEM
After the settings are completed, press OK to save. The display will flash when saving.			

Channel Model:

Channel	8CH	
1	Zoom	000-255
2	(R)	000-255
3	(G)	000-255
4	(B)	000-255
5	(W)	000-255
6	Aperture R	000-255
7	Aperture G	000-255
8	Aperture B	000-255
	15CH	
1	Dimmer	000-255
2	Flash	000-255
3	(R)	000-255
4	(G)	000-255

5	(B)	000-255
6	(W)	000-255
7	Zoom	000-255
8	Effect Model	000-255
9	Effect Model Speed	000-255
10	Aperture R	000-255
11	Aperture G	000-255
12	Aperture B	000-255
13	Aperture Effect Model	000-255
14	Aperture Model Speed	000-255
15	Reset(255)	000-255

Channel	23CH	
1	Dimmer	000-255
2	Flash	000-255
3	(R)First Group	000-255
4	(G)First Group	000-255
5	(B)First Group	000-255
6	(W)First Group	000-255
7	(R)Second Group	000-255
8	(G)Second Group	000-255
9	(B)Second Group	000-255
10	(W)Second Group	000-255
11	(R)Third Group	000-255
12	(G)Third Group	000-255
13	(B)Third Group	000-255
14	(W)Third Group	000-255
15	Zoom	000-255
16	Effect Model	000-255
17	Effect Model Speed	000-255
18	Aperture R	000-255
19	Aperture G	000-255
20	Aperture B	000-255
21	Aperture Effect Model	000-255
22	Aperture Model Speed	000-255
23	Reset(255)	000-255

Technical Parameters:

Voltage:AC100V-240V

Frequency:50Hz-60Hz

Powersupply: 300W

Channel: 08CH,15CH,23CH

Fuse:7A

Life Time:20000H

Control Model:Sound,Auto,DMX512

Motor Quantity: 1 Piece Silent motor

Appearance: high temperature resistant plastic + molded alloy material

Color:Black

Protect:IP20

Net Weight3.8KG

One carton: 23*23*34CM

Gross weight: 4.25KG

One carton with four boxes: 49*49*37CM

Gross weight: 17KG

Care and maintenance:

Shutdown: Before shutting down the lamp, turn off the light source. Allow the cooling fan to quickly dissipate the heat generated by the lamp during use. This will extend the life of the lamp components, especially the light source! To ensure stable operation, the lamp should be kept clean. Before disassembling the lamp for repair or maintenance, confirm that the power is disconnected. Keeping the lamp clean is very important. Please clean it regularly to maintain maximum brightness output and extend the life of the lamp. It is recommended to use a high-quality glass cleaner and a clean soft cloth. Vacuum the interior of the lamp at least once every six months.

After-sales service

Note: All lamps undergo rigorous quality inspection and are packaged intact upon shipment. Please operate according to the instruction manual.

Failures caused by human error are not covered by the warranty.

1. Our company provides lifelong technical consulting services to customers.